

Fig. 1

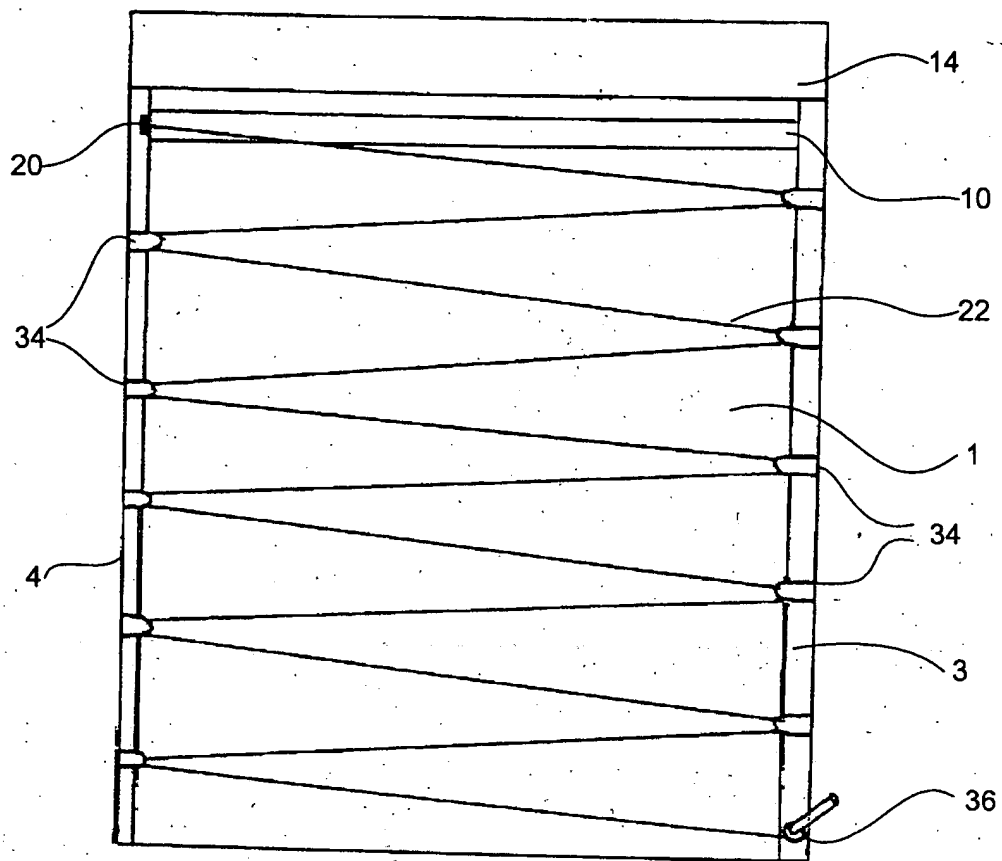


Fig. 2

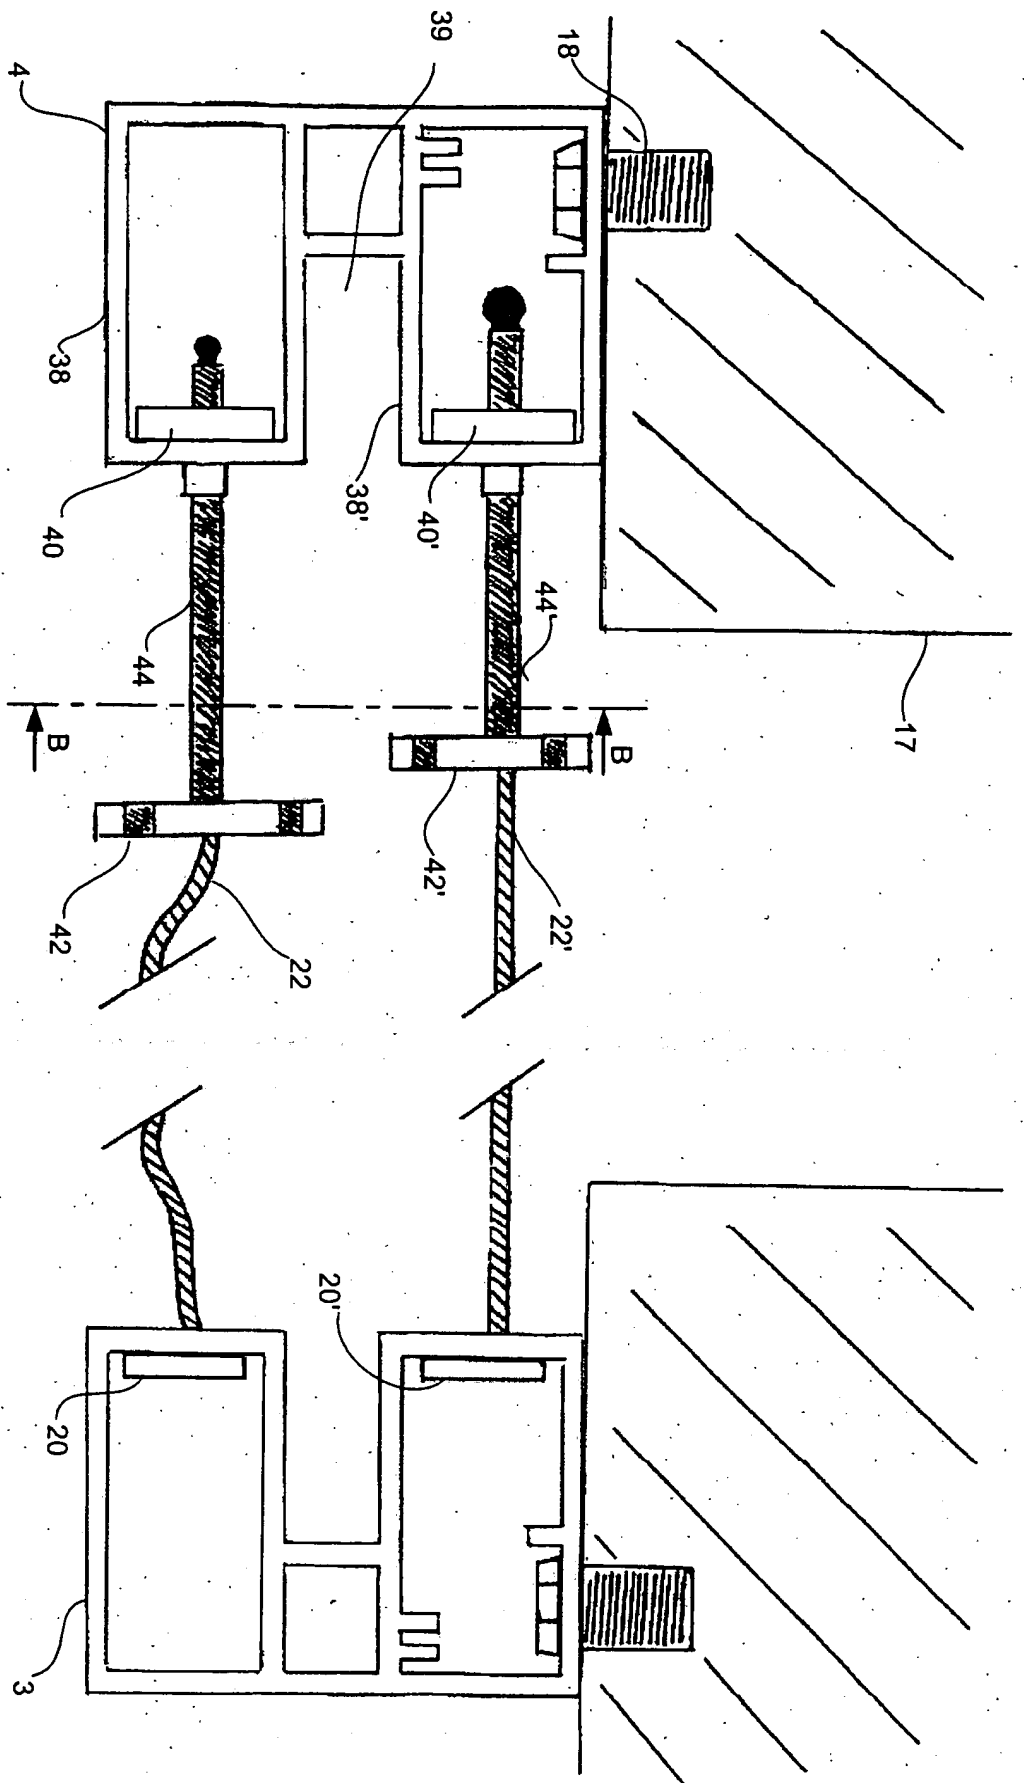
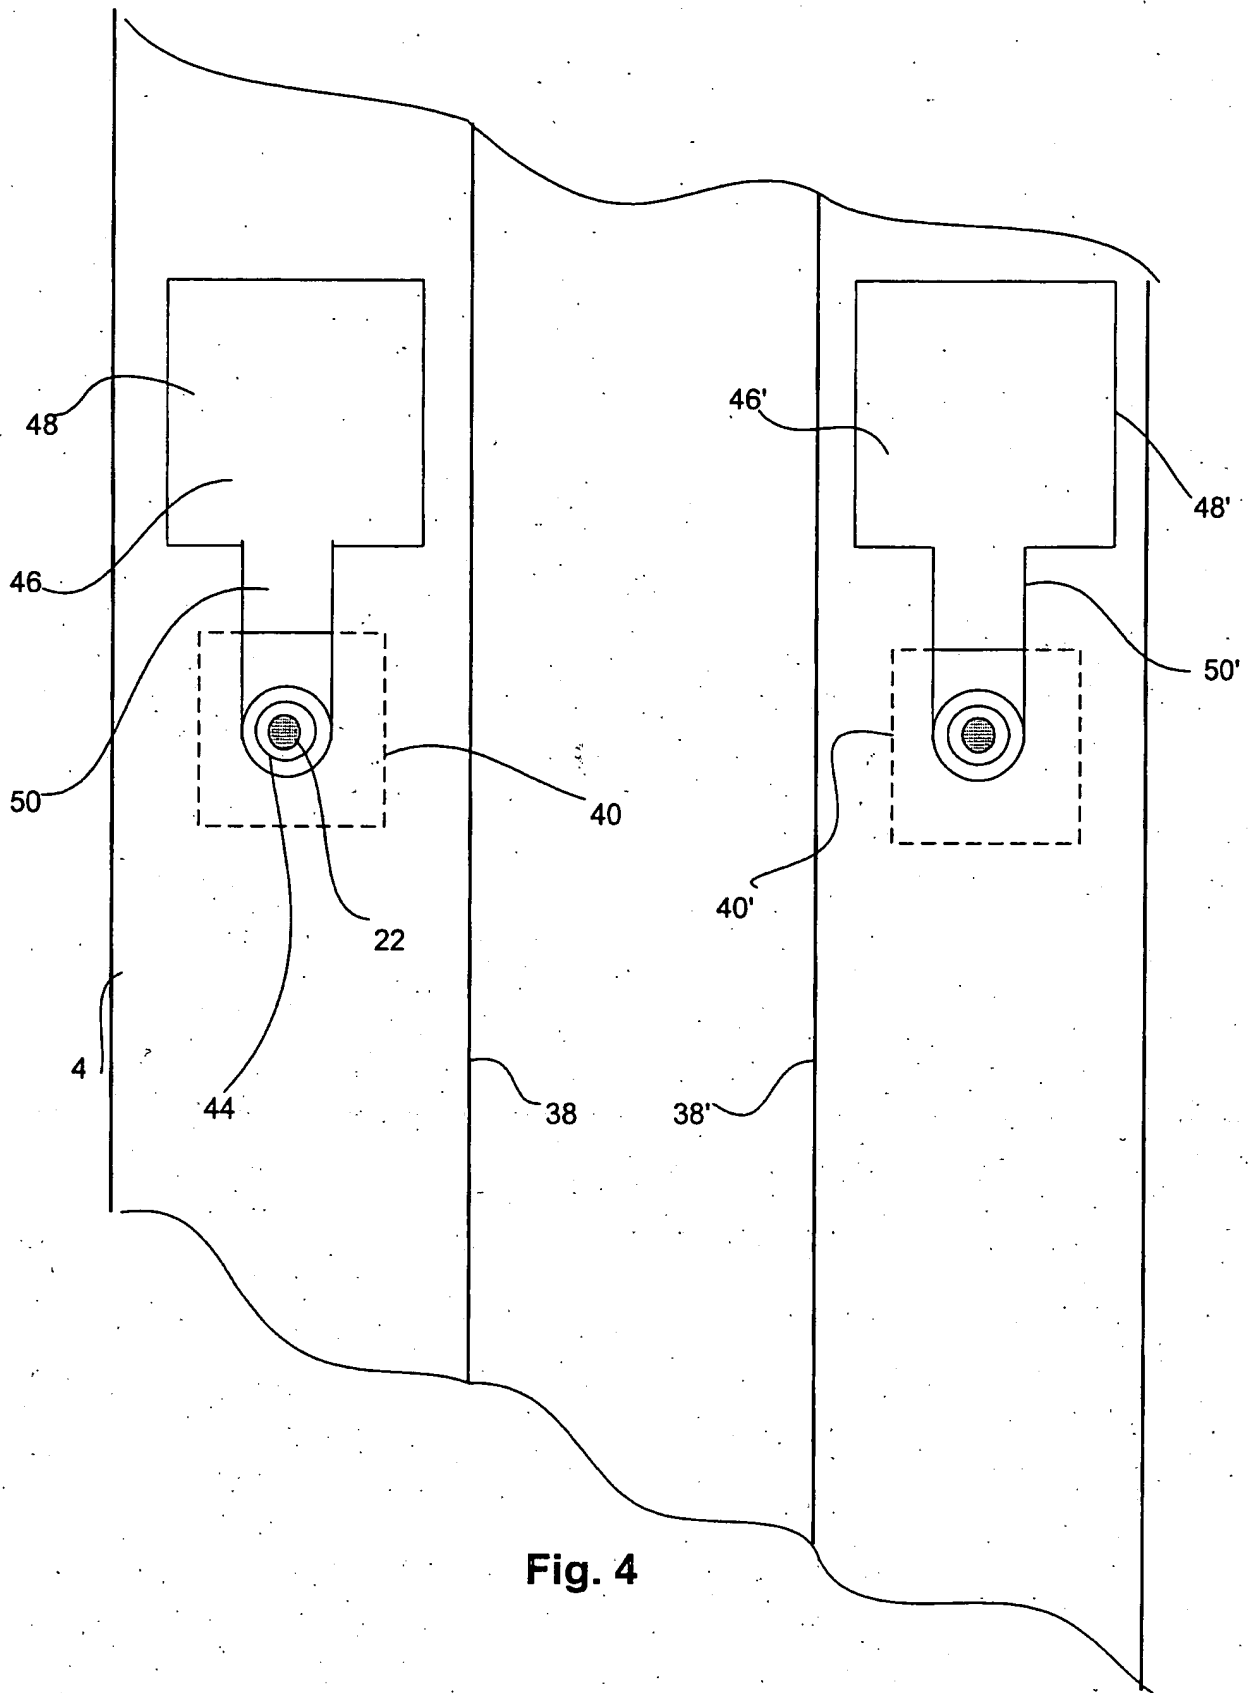


Fig. 3



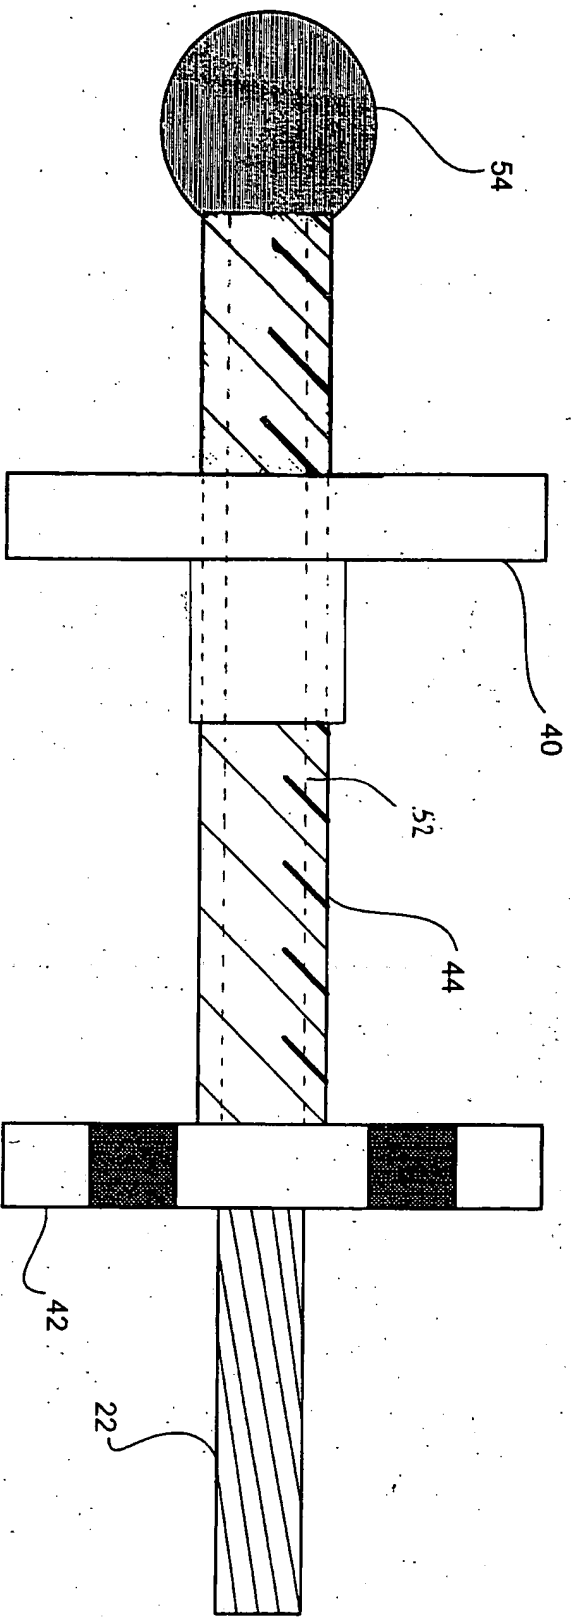


Fig. 5

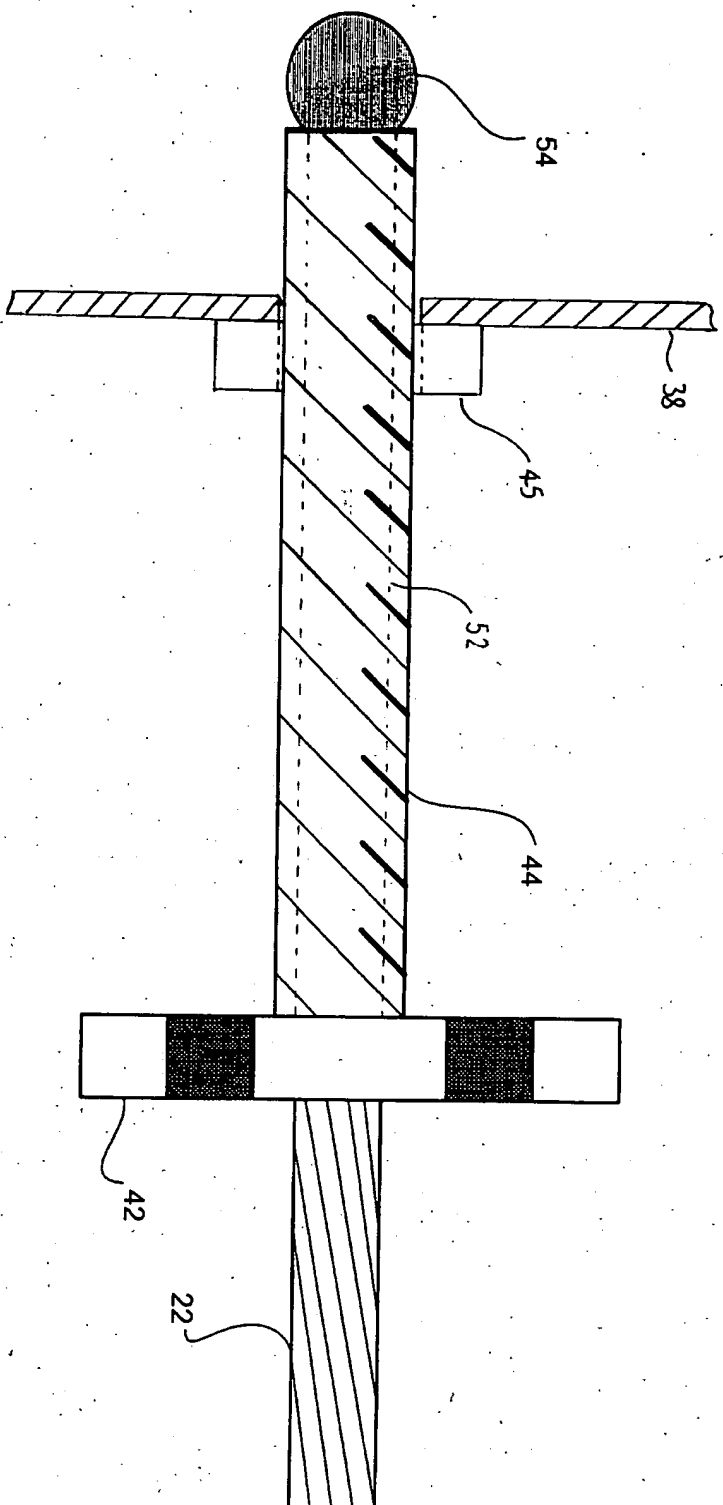


Fig. 5B

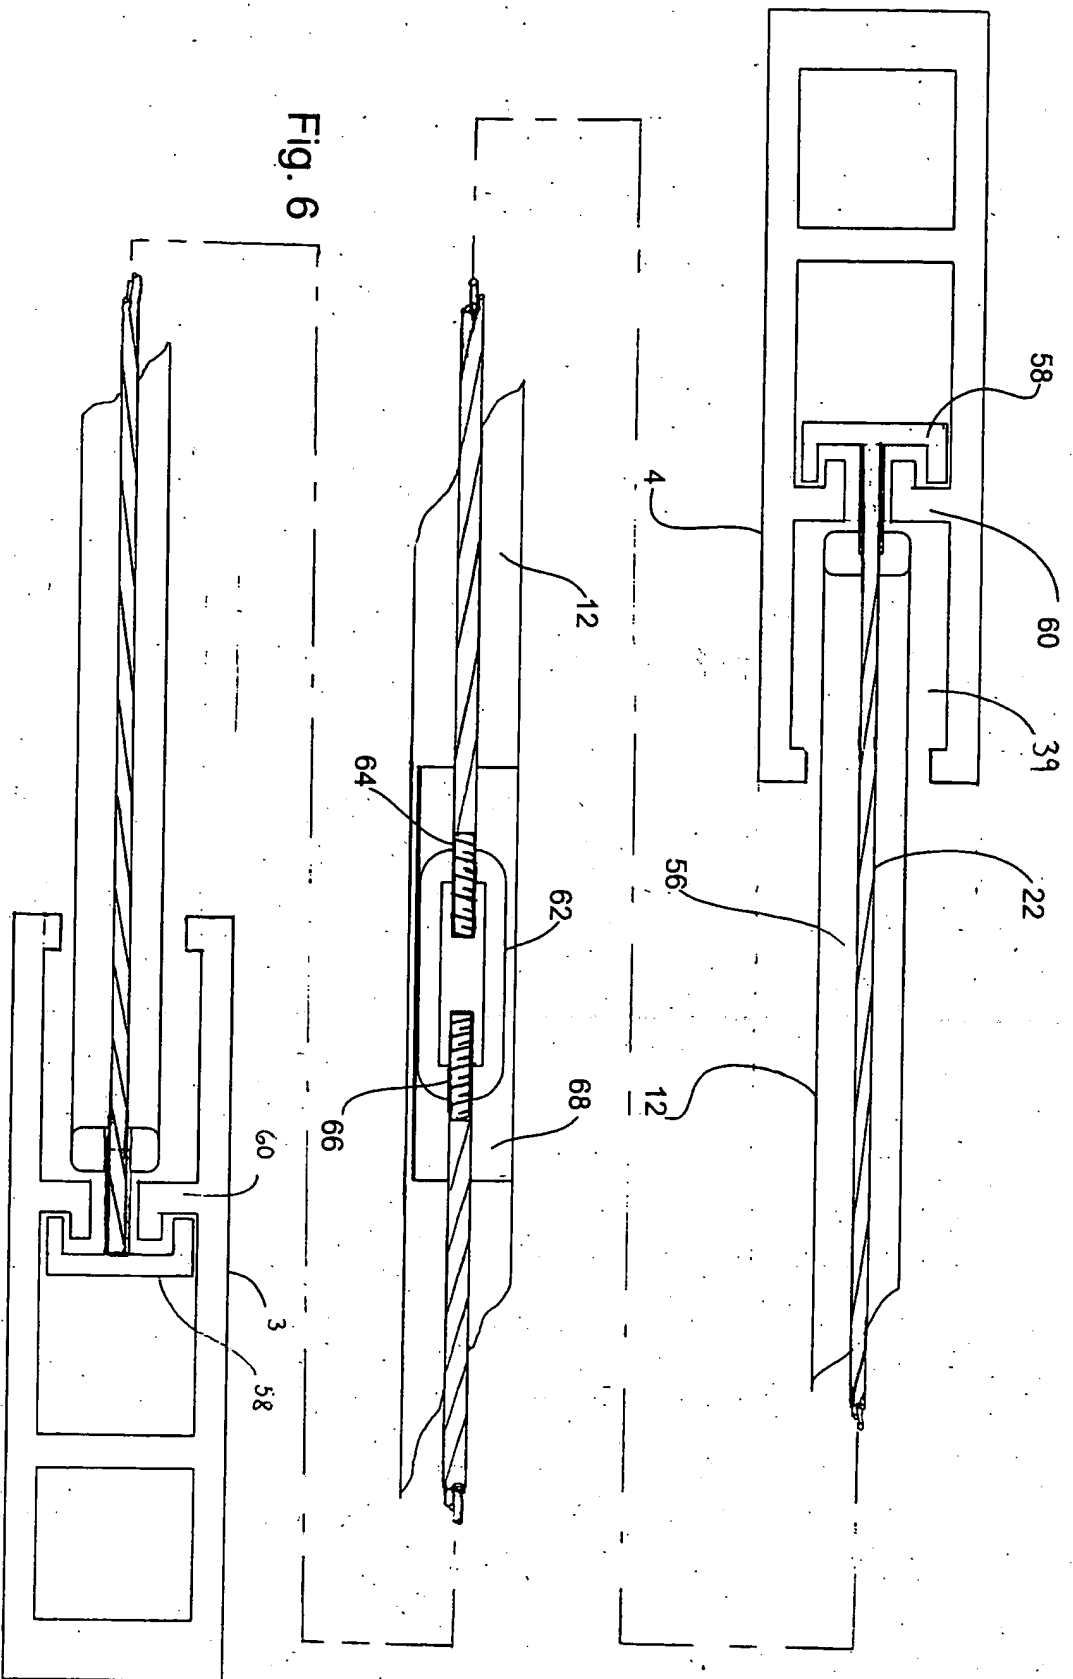


Fig. 6

Fig 7

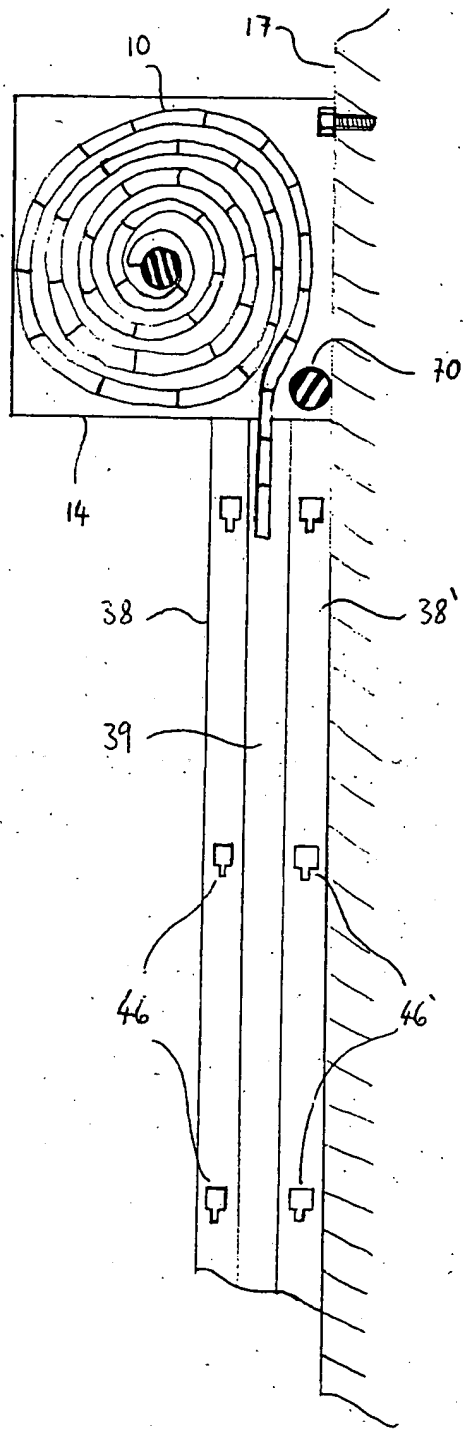


Fig 8

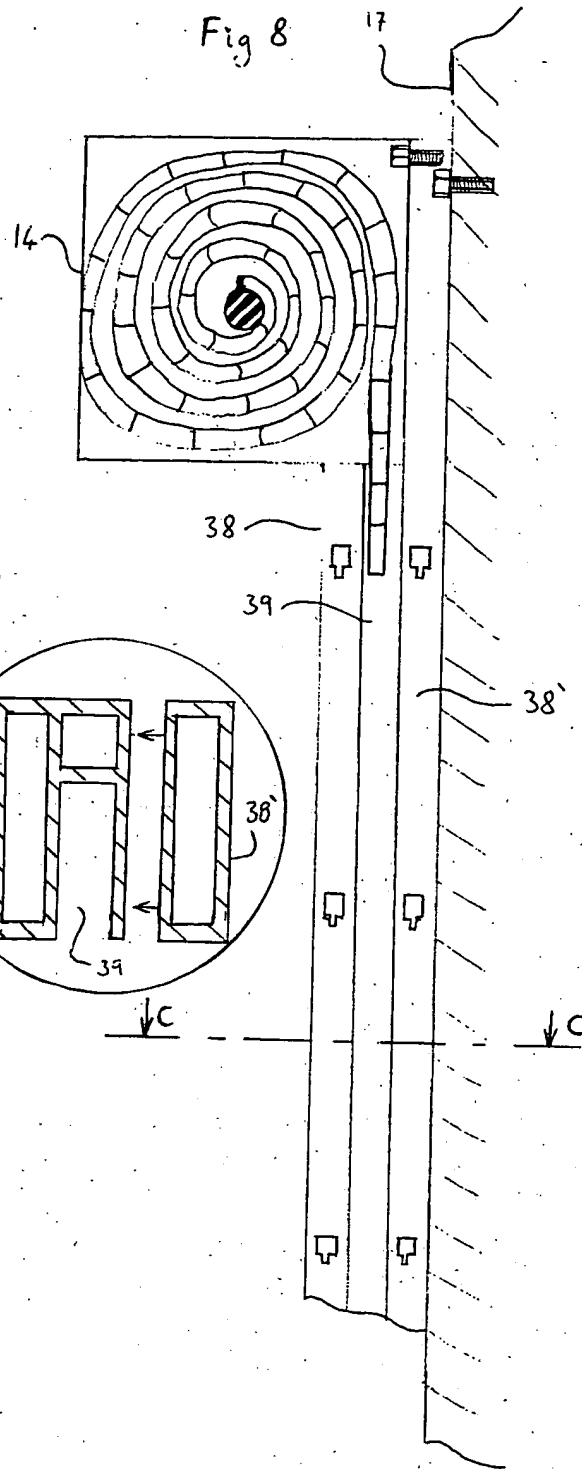
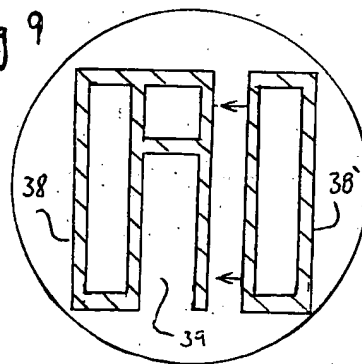


Fig 9



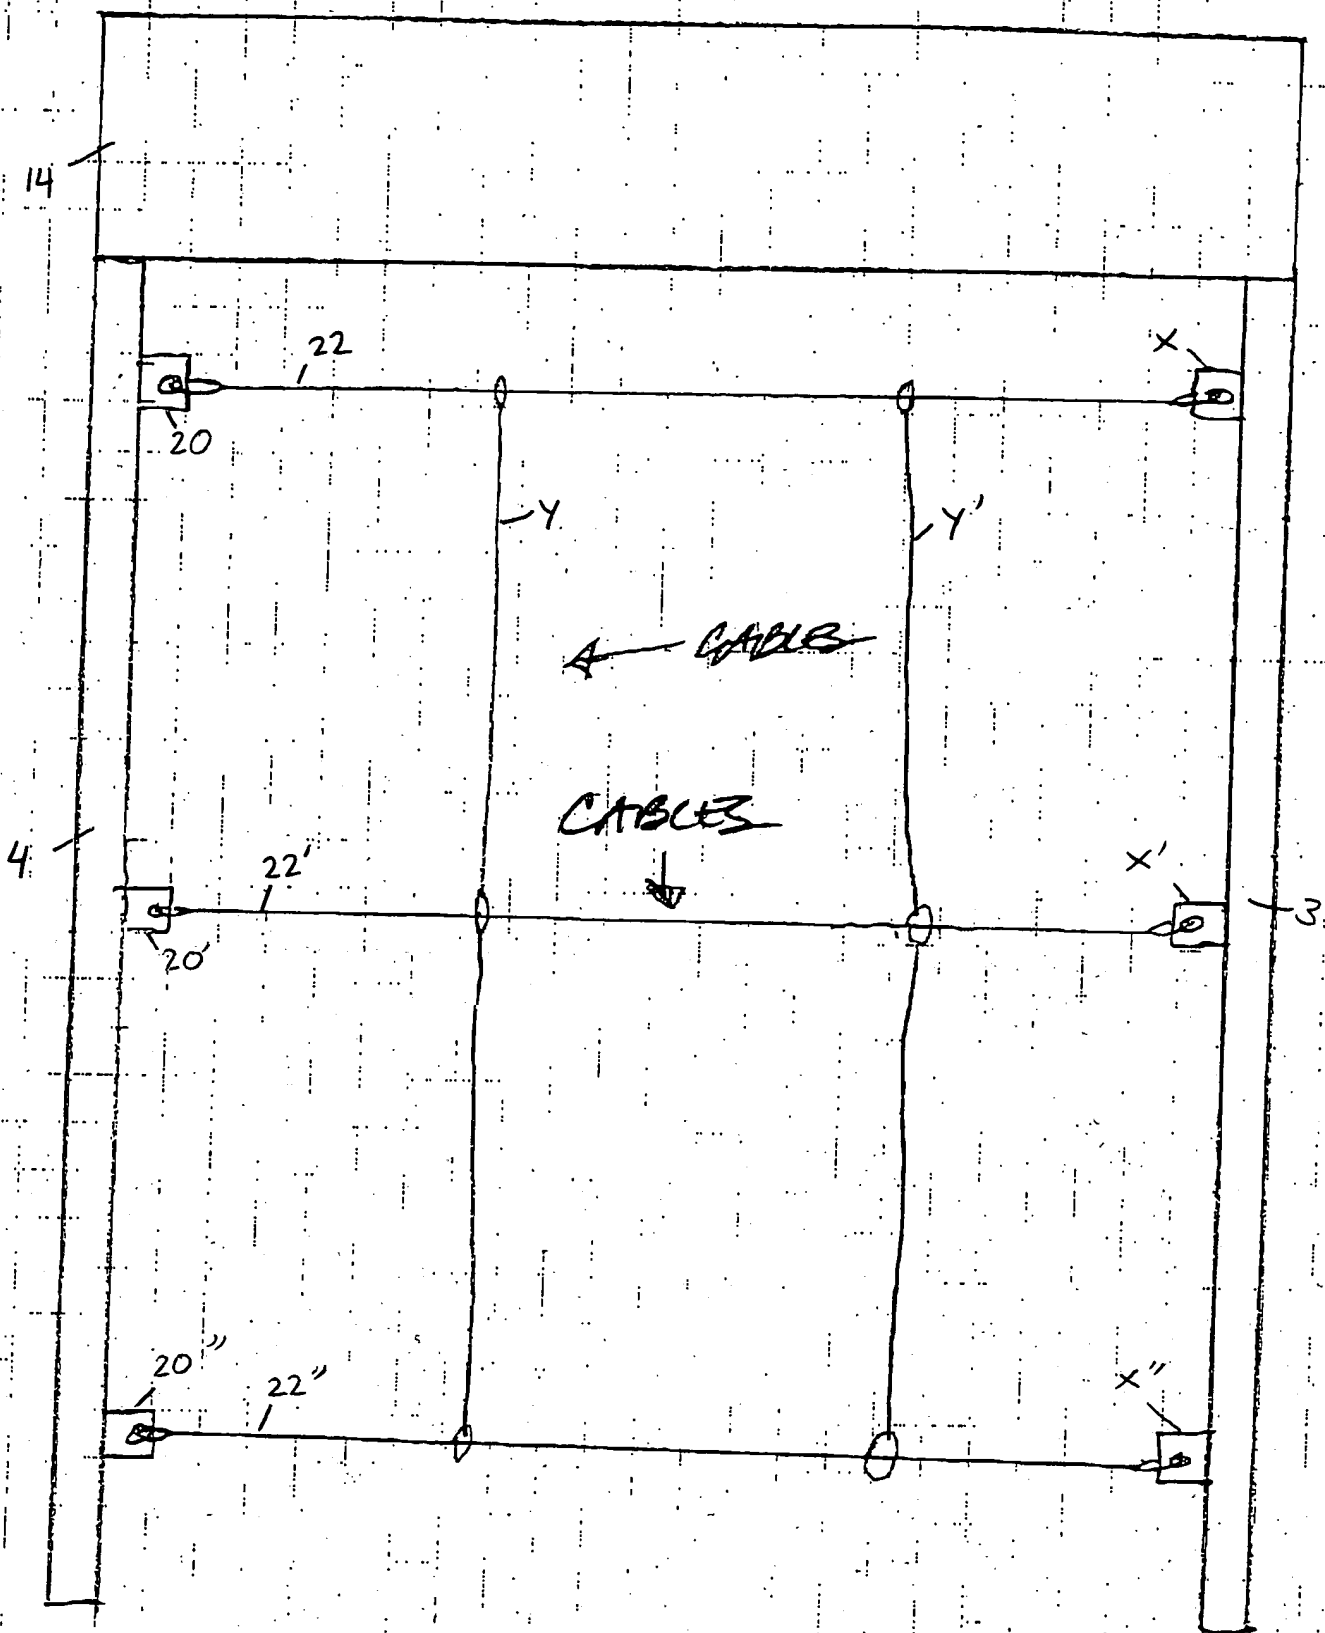


Fig. 10.

①

(COULD ALSO BE USED AS
SAME ATTACHMENT
FOR CROSSING
CABLES INTO
WALL)


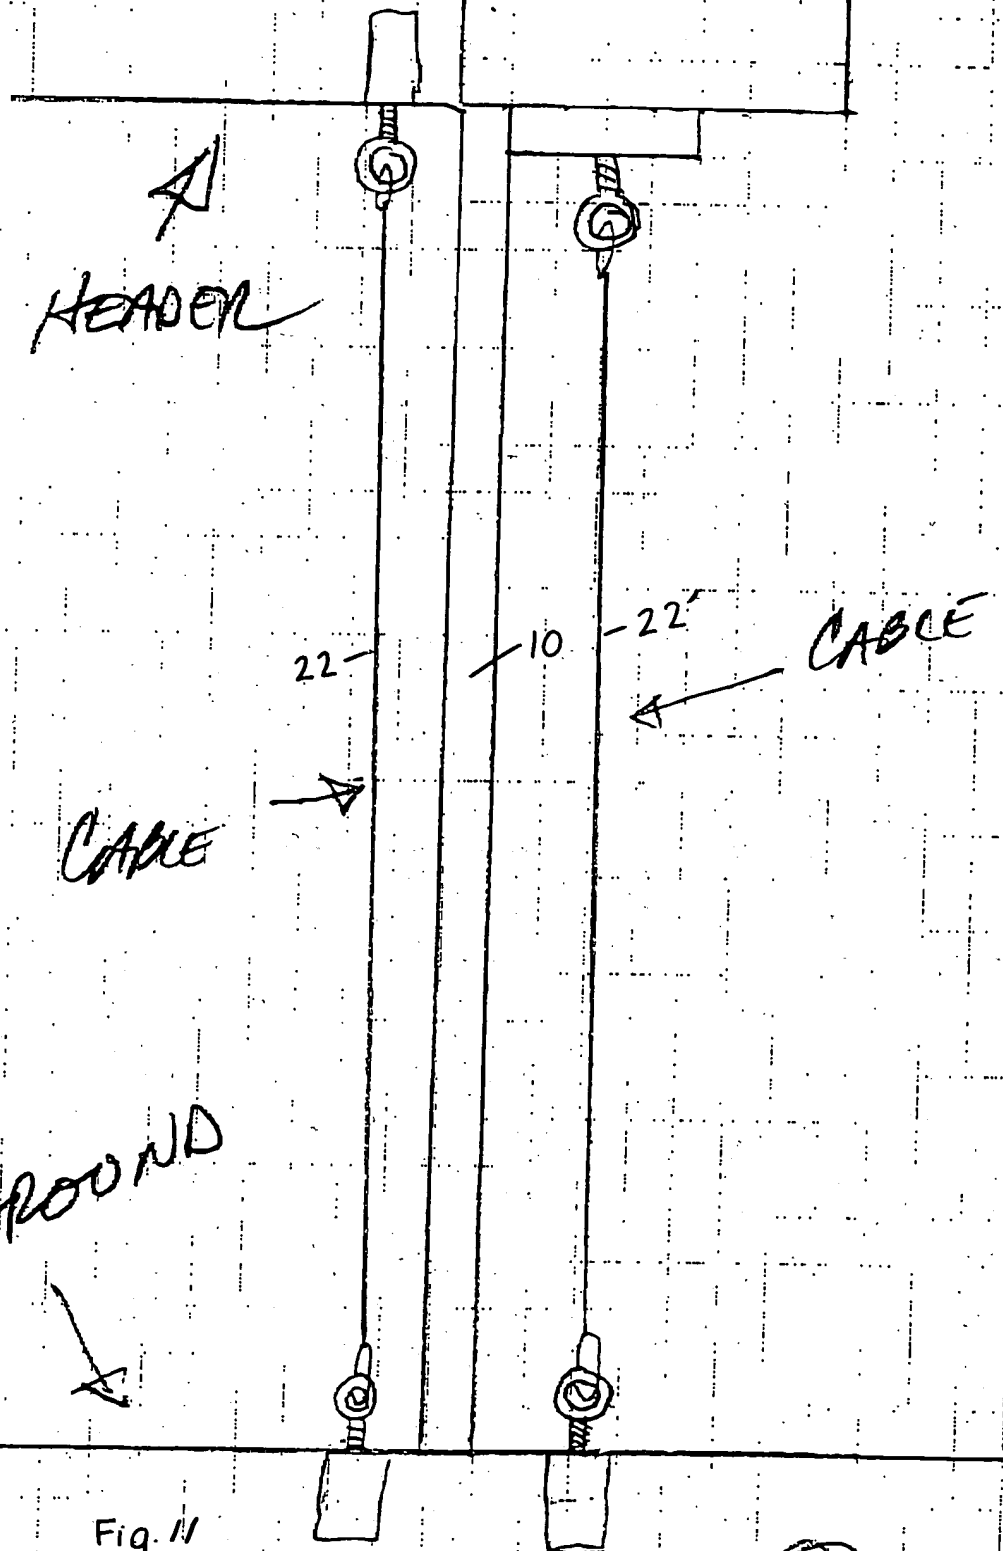


Fig. 11

2

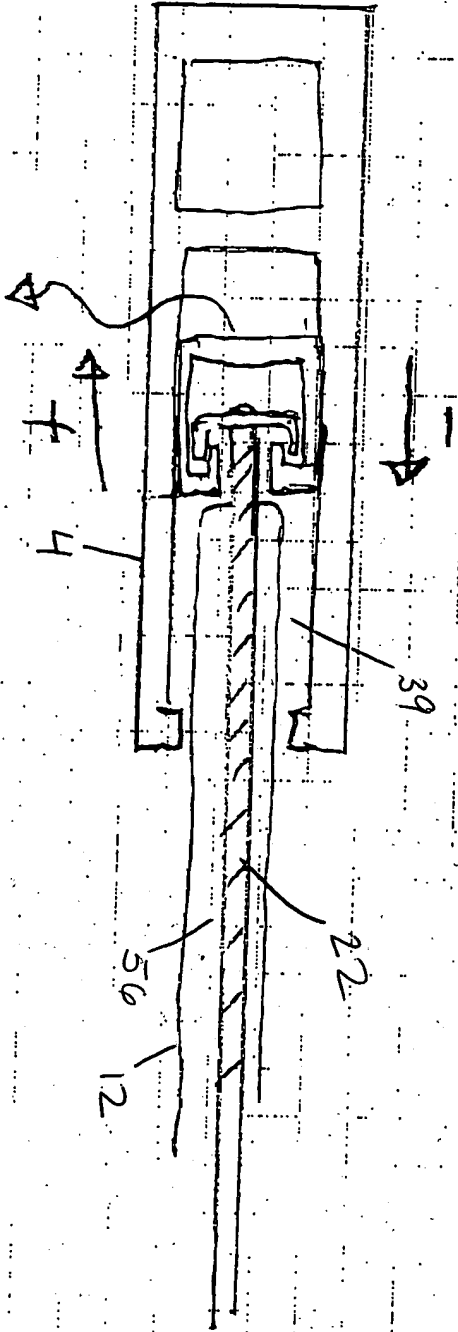



MOVES
TO
ADD TENSION

Fig. 12

3

UNDER PRESSURE

PRESSURE

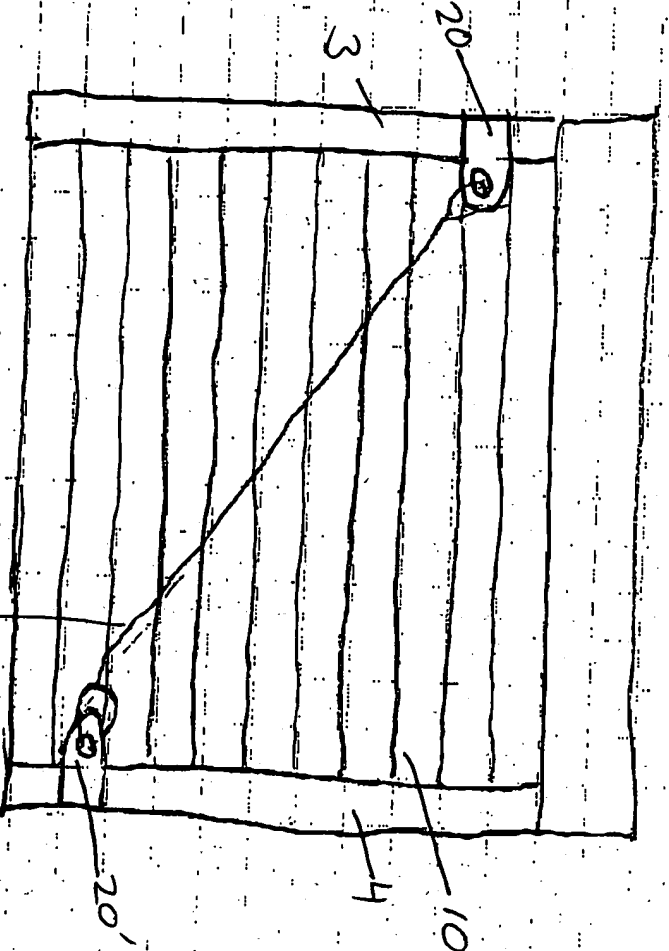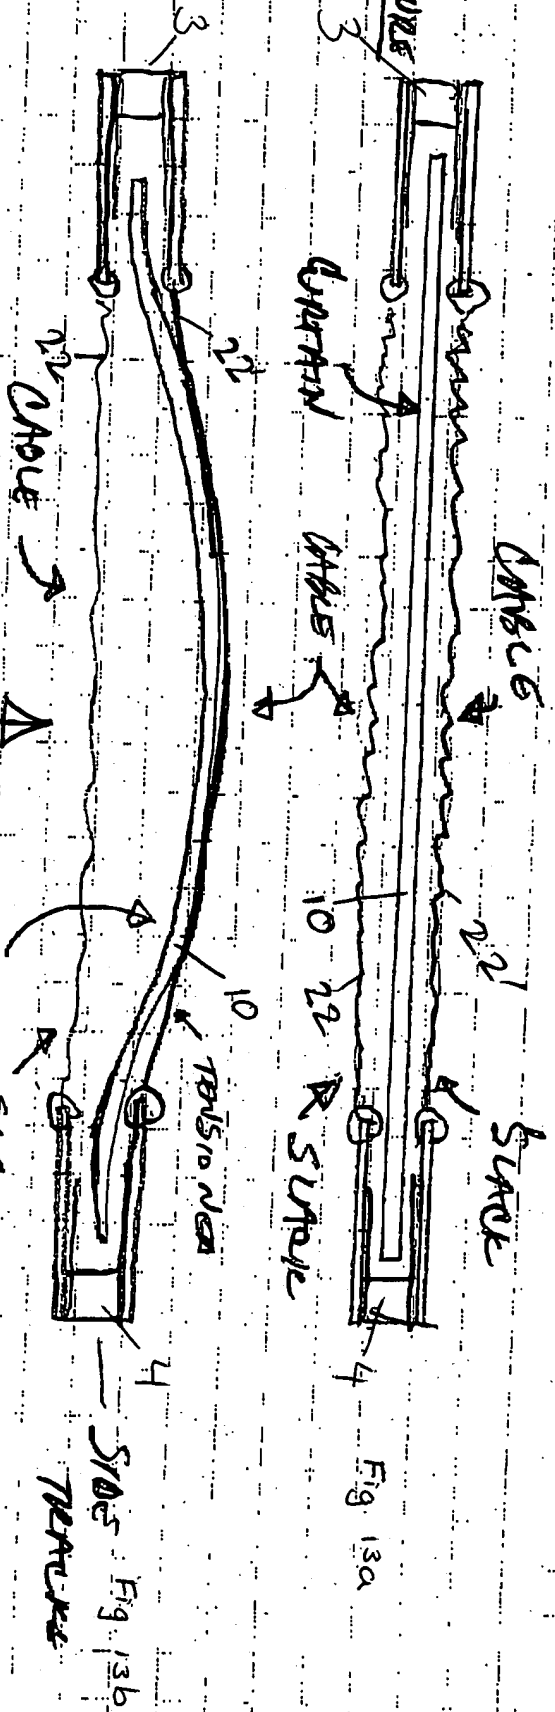

NO ADDITIONAL

TENSION DEVICES

REQUIRED!

CABLE LINES THROUGHOUT PLANT

STAKE EYE

Fig. 14